

MOUNTING INSTRUCTIONS

Membrane

The membrane system shipment includes a textile duct with an integrated airtight layer, a short metal inlet duct with a motor, and mounting accessories for suspending the outlet.

Installation steps:

1. Attach the inlet metal duct with the motor to the air supply.
 - The standard position of the positioning motor is on the right-hand side in the direction of airflow.
 - When the membrane is not connected to power, the motor indicator should point to the heating position, i.e. upwards.
2. The textile straps on the airtight layer are wrapped around and fastened with a zipper to the positioning bracket inside the metal duct.
3. Attach the duct to the initial position, which is already fixed to the metal duct.
 - Ensure that the membrane is properly aligned and that the seam separating the heating and cooling halves (typically containing the perforation) is exactly centered at the 3 and 9 o'clock positions.
4. Attach the sections of the duct and membrane using zippers, ensuring they connect seamlessly.

